

## IR - HEX **Commands**



IR or HEX Commands are used to control our products from a home automation system or programmable remote control.

## How does it work?

Simply program the Hex commands into your home automation system to operate your screen or lift just like the original remote control.



## Can I hide the IR Emitter?

Yes. Simply stick your IR emitter over the IR window so you don'tsee it from below.

## **IR - HEX Codes**

<b>12</b> /1 00400	
UP	0000 006c 0022 0000 0156 00ac 0016 0016 0016 0016 0016 0016 0016 001
STOP	0000 008c 0022 0000 0155 00ac 0016 0016 0016 0016 0016 0016 0016 001
DOWN	0000 006c 0022 0000 0156 00ac 0016 0016 0016 0016 0016 0016 0016 001
Goto Position 1	0000 008c 0022 0000 0158 00ac 0016 0016 0016 0016 0016 0016 0016 001
Goto Position 2	0000 008c 0022 0000 0156 00ac 0016 0016 0016 0016 0016 0016 0016 001
Goto Position 3	0000 006c 0022 0000 0156 00ac 0016 0016 0016 0016 0016 0016 0016 001
Goto Position 4	0000 008c 0022 0000 0156 00ab 0016 0016 0016 0016 0016 0016 0016 001

**Download Hex Codes :** www.puretheatre.com/Pure\_Theatre\_Hex\_Codes.zip