




# How do I choose my screen size?

The right screen size will give the most comfortable viewing. This is calculated based on how far away you are sitting, and remember! Screens are measured in width, so you need to be sitting 1.5 to 2 times the width of the screen away.

**Choose your viewing distance to give the recommended screen size.**

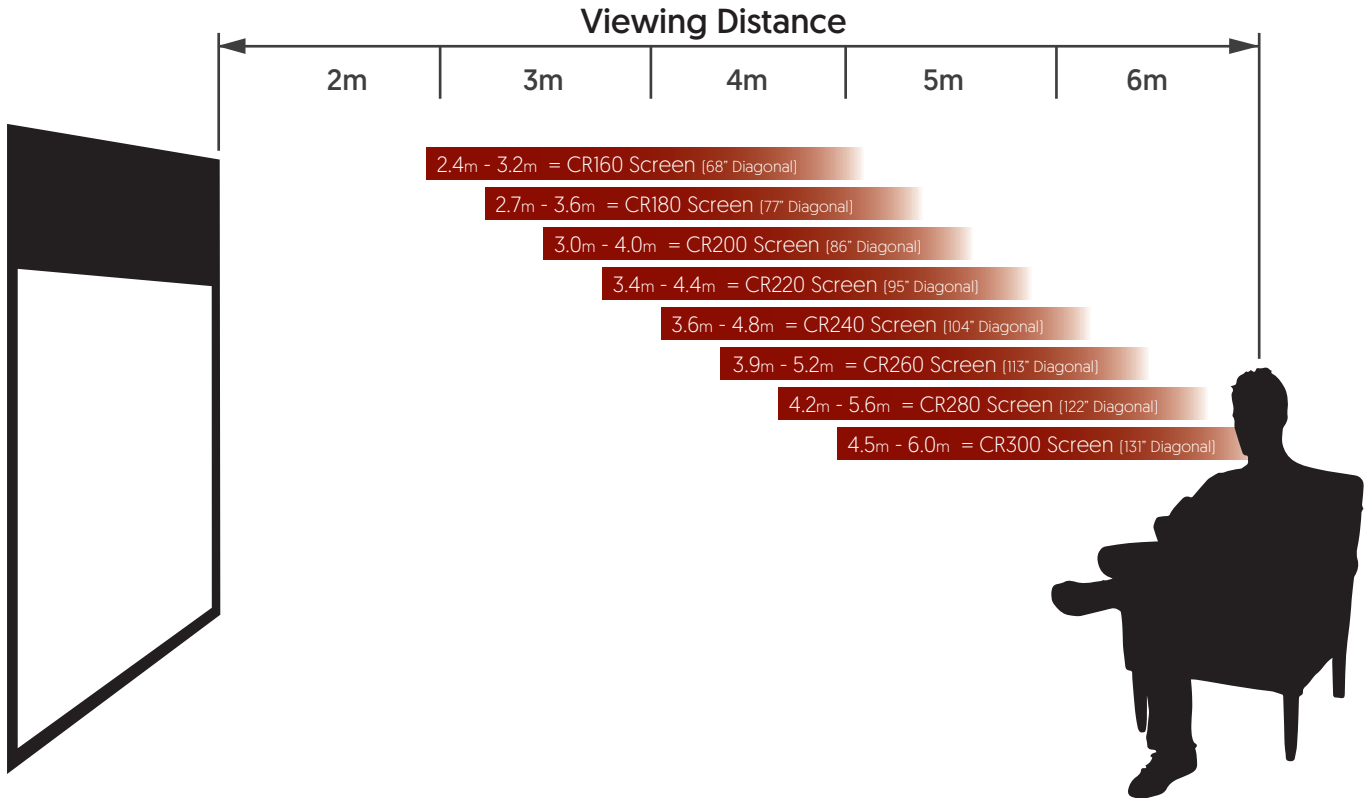

**How far away should my projector be?**

All projectors have different throw ratios. This simply determines the minimum & maximum distance from the projector to the screen.

PROJECTOR	160cm Screen		180cm Screen		200cm Screen		220cm Screen		240cm Screen		260cm Screen		280cm Screen	
	Distance min	Distance max	Distance min	Distance max	Distance min	Distance max	Distance min	Distance max	Distance min	Distance max	Distance min	Distance max	Distance min	Distance max
 Epson EH-TW7400 Epson EH-TW9400 Epson EH-LS10500	2.01m	4.31m	2.28m	4.88m	2.55m	5.45m	2.81m	6.03m	3.08m	6.60m	3.35m	7.18m	3.62m	7.75m
 Sony VPL-VW270 Sony VPL-VW570 Sony VPL-VW760	1.9m	3.9m	2.20m	4.50m	2.40m	5.00m	2.70m	5.60m	3.00m	6.10m	3.20m	6.60m	3.50m	7.20m
 Sony VPL-VW320ES Sony VPL-VW550ES														